





New Style Water Valve Installation Instructions:

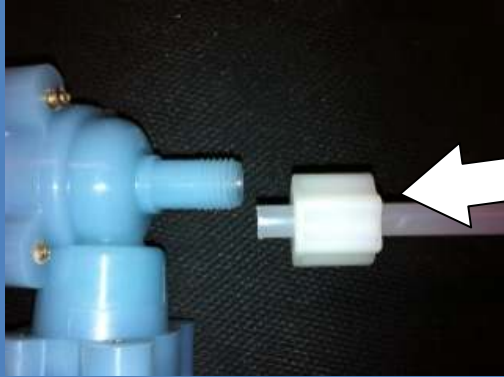


Old style water lines and valves had threaded fittings as seen in picture on left.

With changes in technology the manufacturers have deemed the threaded connectors unnecessary.

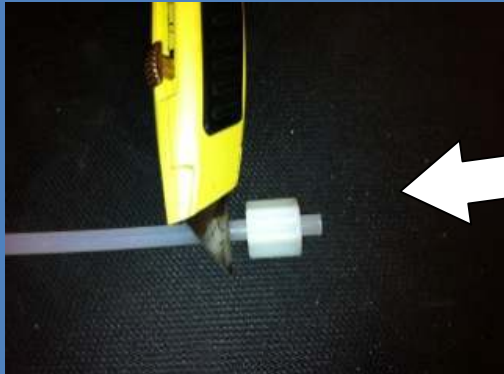

You must cut the existing water line as shown in picture. Cut it on the backside of the nut as shown in picture. The manufacturer has provided enough slack in the line to reach the new water valve.

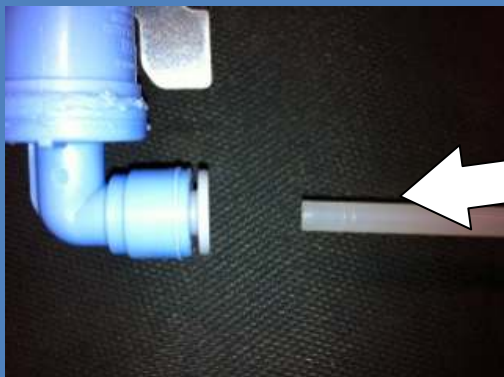

Push the line in the corresponding hole as far as it can go. It will seat and lock itself into the hole.



If you need to release the line to change the valve in the future, press down on the outer ring of the valve and remove the line. These new fittings are called quick connect fittings.